

# You can do it...

## ...we can help!



### Free standing cast bath assembly guide



# CTM

More than you expect. For less than you think.

## Free standing cast bath assembly guide



### Before you start

- Place soft material on floor to protect bath and place carefully top down on flat surface.
- Remove protective rubber pad from the four threaded inserts. Blow out any dust.
- Rubber pads protect the bath, but bath should not be transported or dragged on them.
- Inspect threaded inserts for cracks. Report any damage immediately to the retailer.


#### Please note:

Feet are designed to hold the weight of the bath, complete with water and user. It is not suitable to transport the bath mounted with water and user, mounted on the feet, or drag the bath with mounted feet. If you need to move bath during installation, pick it up and carry with feet clear of the ground at all times. Take care when putting the bath down to prevent sudden impact that could break a foot off.


### 3 easy steps



By hand, screw the bolt with two washers (smaller one nearest the bath) part way into an insert. Slide the plate off the foot between the two washers and make sure the foot fits flush with the bath.

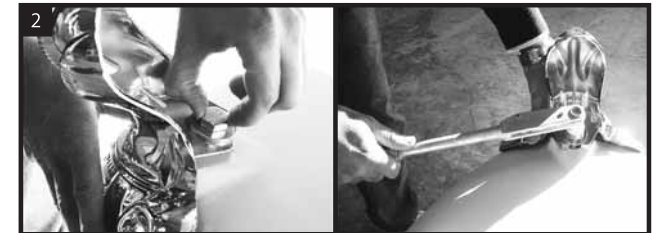

Screw bolt in as far as possible by hand, then tighten with torque wrench, using no more than 15 Nm of force. (Too much force will break insert out of casting).

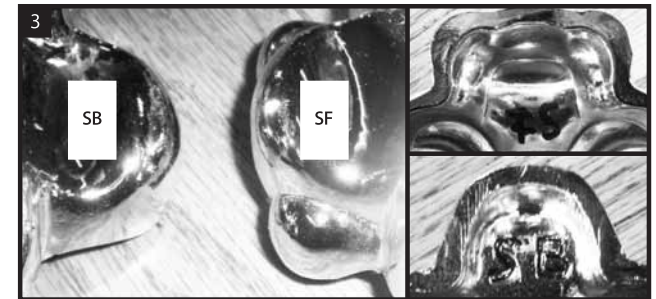

For Slipper Bath: Single ended feet, marked SB (one big crown on top), must be fitted on the FRONT (low end). Double ended feet, marked SF (three part crown on top), must be fitted on the BACK (high end). ALL OTHER CAST BATHS USE THE SAME FEET ON ALL CORNERS.

## CTM AT YOUR SERVICE

Remember, when in doubt, ask the CTM sales staff or visit our website at [www.ctm.co.za](http://www.ctm.co.za). Good luck, and enjoy your installation!