


INSTRUCTION MANUAL


MODEL:CT8004BF/CT8005BF/CT8008BF

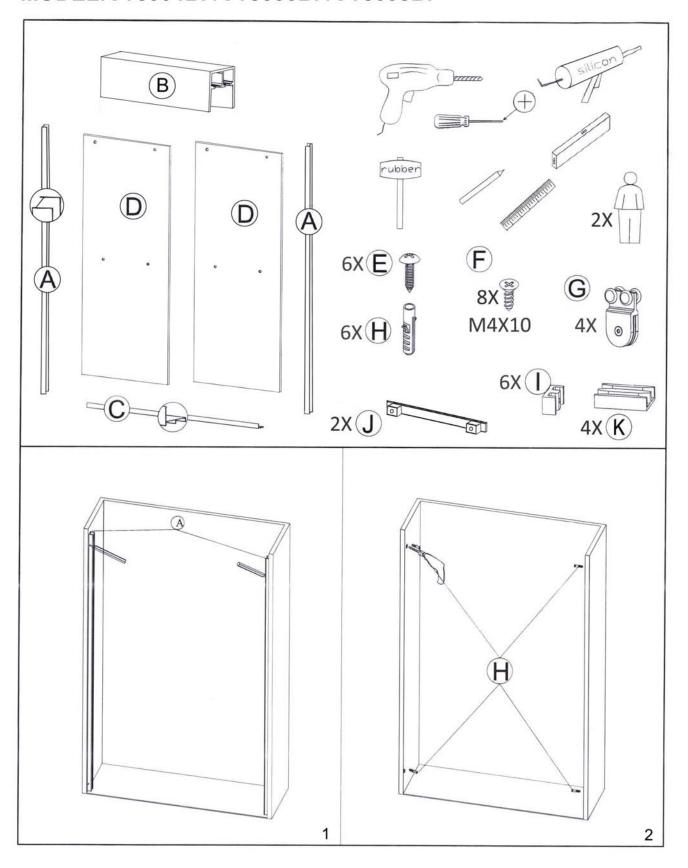

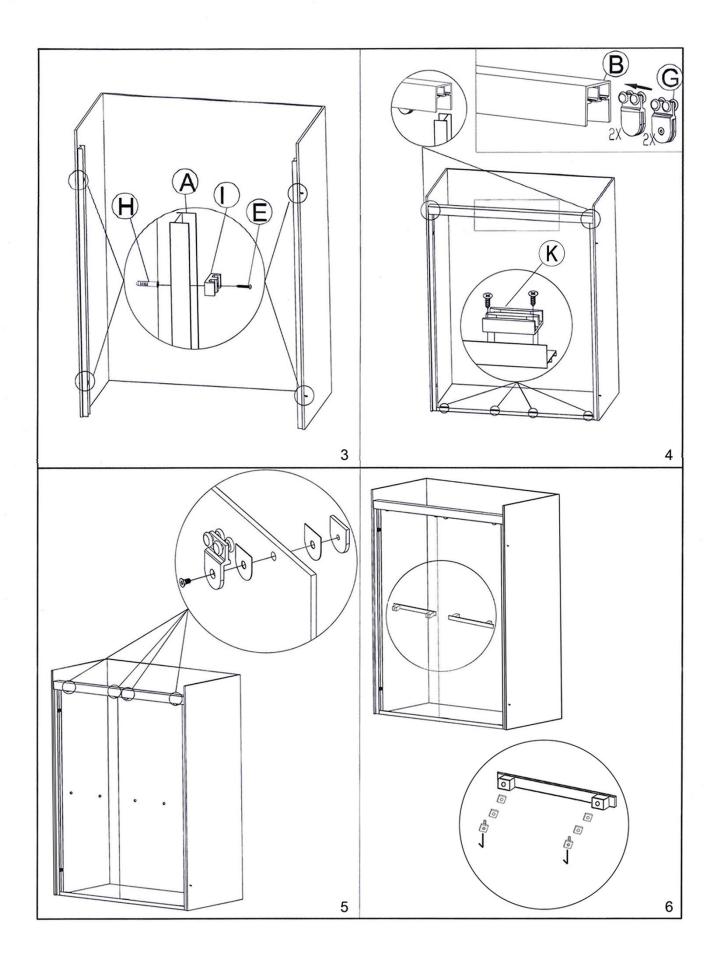


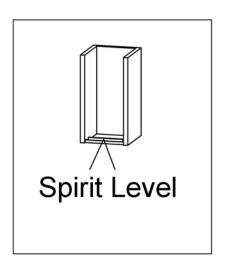


1. Ensure that the floor/tray is level before you begin with the installation.

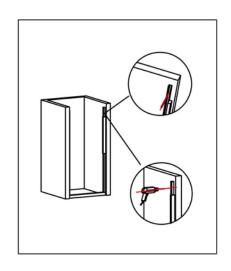


Ensure that you use a spirit level to make sure that the wall channel is completely plumb before you mark and drill the holes.

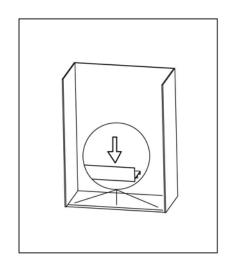


3. Put the bottom profile on the floor.

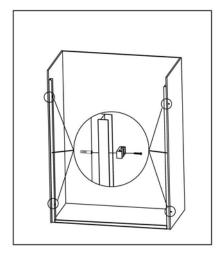


4. Fix the wall chanells with supplied plugs and screws.

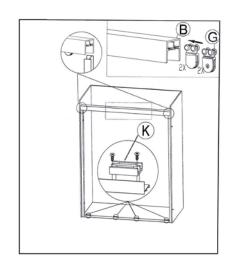


Before putting top profiles onto wall channels, pls insert the wheels as per showed picture. Then fix the plastic parts onto the bottom profile.

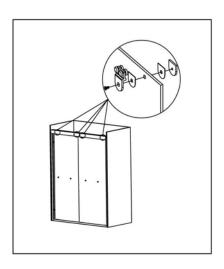

6. Hang and fix the movable door glass.

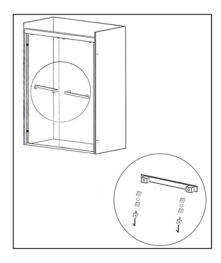

4. Install handles.

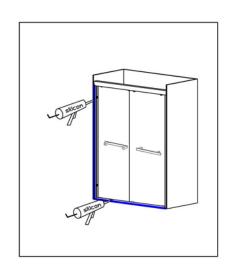

 You now need to seal the enclosure with a good anti fungal silicone, only seal the out side of the enclosure. DO NOT SEAL THE ENCLOSURE ON BOTH SIDES!



6. Allow the enclosure to dry for at least 24 hours before making use of it.